

March 19, 2004

## Icom PW1 Setup

- (1) **Connect Ac plug to linear and plug into 234VAC for 1KW output.**
- (2) **Setup of Icom TCVR to PW1**
  - a. **Turn off the Icom TCVR and PW1.**
  - b. **Hold the INPUT button in while you turn on the PW1**
  - c. **The LED will then start blinking on the PW1**
  - d. **Turn on the Icom TCVR and rotate the VFO knob until the light quits blinking.**
  - e. **Turn off the PW1 and turn it back on and it should be reading the same band as the Icom TCVR and is ready to operate.**
  - f. **Adjust ALC on back of PW1 per manual.**
- (3) **Operation**
  - a. **Set the Icom TCVR to FM mode with full power clockwise. Set PW1 to TUNER ON with OPERATE/AMP OFF**
  - b. **Put tcvr into tx (push in SEND button) and note that SWR on the PW1 goes to 1:4 to 1 or less.**
  - c. **Send PW1 OPERATE/AMP to ON position. You should be ready to operate on SSB or any mode.**